

Piese schimb si consumabile pentru aparate mai vechi

Nr. crt.	Articol
1	Antispill blade 012855
2	Antispill EP4300 (35000995)/65-000995
3	Antispill EP5325 (65012939)/65-012939
4	Ball bear. EP2050 (65576118)/65-576118
5	Ball bear. EP3050 (65576225)/65-576225
6	Ball bear. EP5325 (65576221)/65-576221
7	Ball bear. EP8602 (65576205)/65-576205
8	Ball bear. EPDi250 (65021630)/65-021630
9	Ball bear. EPDi750 (35016005)/65-016005
10	Ball bear. NP4835 (15021526)/15-021526
11	Ball bear. NP6850 (15576233)/15-576233
12	Ball bear.Kon.4045 (65576236)/65-576236
13	Ball bear.Kon.UBIX (65576204)/65-576204
14	Bearing MX M 450 (36506)/36506
15	Belt Minolta AFR3 (65011916)/65-011916
16	Bucsi fuser NP 1550 (15576207)/15-576207
17	Camera web DC212C Panda2B,CHICONY
18	Cartus HP 72 C9374A grey T610
19	Chip 1,5K Samsung ML 2160
20	Chip E 230/232/238/240, E330/332/340/342
21	Chip eco 1.6K HP PRO P1102
22	Chip eco 2.5k ML 1910
23	Chip HP 1300

Nr. crt.	Articol
24	Chip HP 1600/2600/2700/3000/3600/3800/4700 magenta
25	Chip HP 1600/2600/2700/3000/3600/3800/4700 yellow
26	Chip HP 3500 cyan
27	Chip HP 3500 magenta
28	Chip HP 3500 yellow
29	Chip HP 3500/3700 black
30	Chip HP 3700 cyan
31	Chip HP 3700 magenta
32	Chip Lexmark E120
33	Chip Lexmark X422/IP 1410
34	Chip Samsung 510 cyan
35	Chip Samsung 510 magenta
36	Chip Samsung 510 negru
37	Chip Samsung 510 yellow
38	Cil. Canon NP 6020(15015700)/15-015700
39	Cil. Di 750/BH 6500
40	Cil. HP1100
41	Cil. Katun Canon NP3030/3050
42	Cil. Katun EP1050/1052/1054
43	Cil. Ricoh MP 3500/19540
44	Cil. Sharp Katun SF7700/7750
45	Cil.Canon 6317/6020 (15014366)/15-014366
46	Cil.Canon AX - AEG
47	Cil.Canon IR 1600 (15023386)/15-023386
48	Cil.Canon PX - AEG

Nr. crt.	Articol
49	Cil.Canon VX - AEG (HP5P)
50	Cil.IBM 4039
51	Cil.Minolta EP470Z (65502780)/65-502780
52	Cil.Mita 2556 (38000925)/38-000925
53	Cil.pentru Minolta Di152 - AEG
54	Cil.Toshiba 1210 (43502772)/43-502772
55	Cil.Toshiba 2060 (43026309)/43-026309
56	Cilindru Canon 1215/1015
57	Cilindru Canon IR 1600/2000
58	Cilindru Canon IR 2200/3300
59	Cilindru compatibil HP 1320
60	Cilindru compatibil HP P2035/P2055
61	Cilindru compatibil Xerox 3250 / 4623
62	Cilindru HP 2100 for use
63	Cilindru HP 2300
64	Cilindru HP 2400/2410/2420
65	Cilindru HP 4100 for use
66	Cilindru HP 5000
67	Cilindru HP 5L/AX for use
68	Cilindru HP 8100
69	Cilindru HP EX
70	Cilindru HP Laserjet P1505
71	Cilindru HP NX
72	Cilindru LexE230/232/332 for use
73	Cilindru LexT420 for use

Nr. crt.	Articol
74	Cilindru pentru HP 1200
75	Cilindru Samsung ML 1610/Dell 1100
76	Cilindru Samsung ML1710 for use
77	Corona wire EP 4210 (65375159)/65-375159
78	Corona wire KM 6000 (65013999)/65-013999
79	Developer unit seal (xx011054)/JEGULET-00
80	Drum Cleaning Blade 1216 (18631)/18631
81	Drum Cleaning Blade HP 1010 (32456)/32456
82	Drum Cleaning Blade LJ M 2727 NFS (32451)/32451
83	Drum Cleaning Blade LJ3320 (32458)/32458
84	Drum Cleaning Blade TS 1370 (36501)/36501
85	Drum Cleaning Blade TS DP 2570 (18663)/18663
86	Drum picker finger Canon 4835 (15014465)/15-014465
87	Drum picker NP 6050 (15016793)/15-016793
88	Feed component KN EDH 1(65025702)/65-025702
89	Feed prevent.Di 750 (65019941)/65-019941
90	Feed roller Canon RDF-B1 (15011369)/15-011369
91	Fixing film HP 2100
92	Fixing film HP 2200
93	Fixing film HP 5L/6L/AX
94	Fuser Canon IR1600
95	Fuser cleaning KN 7075/65019598
96	Fuser Gear 15T/19T EP1052/1054/07106
97	Fuser Gear 15T/20T EP 1050/1080/07108
98	Fuser Gear 18T EP1050/1080/07109

Nr. crt.	Articol
99	Fuser Gear 24T EP1052/1054/07107
100	Fuser Gear 24T EP1080/1052/07110
101	Fuser Minolta Di 152
102	Fuser Roller Bearing Di 251 (576217)
103	Fuser roller CF 900 (35018516)/F.C.MINCF9000
104	Fuser roller EP4300 (35632389)/F.C.MIN430000
105	Fuser roller KN Di 151(35022872)/65-022872
106	Hartie fax depozit
107	Heat ins.sle.KN 760 (65014269)/H.I.S.KN76000
108	Heater lamp Minolta EP 4000
109	Heater lamp NP2010 (15017046)/H.L.CAN201000
110	Lam. stergere Ricoh MP1045/17343
111	Lam.stergere Canon PX HP 4L/L.S.CAN.PX-00
112	Lam.stergere Canon WX/5SI
113	Lamela stergere Toshiba Estudio160/43022865
114	Lamele Katun pt. Copiatoare diferite
115	Lamele Katun pt. Imprimante diferite
116	Lampa cuptor Canon NP2010
117	Lampa cuptor Minolta EP4210
118	Lampa exp.EP4210 (35021137)/L.E.MIN421000
119	Lampa exp.EP4230/5400/L.E.MIN423000
120	Lampa exp.EP450 (65021179)/65-021179
121	Lampa exp.EP5400 (35021125)/L.E.MIN540000
122	Lampa exp.NP6060 (15021140)/L.E.CAN606001
123	Lampa expunere Canon 115 (15434717)/L.E.CAN115

Nr. crt.	Articol
124	Lampa Minolta 1154-6512-01
125	Lampa Minolta 9351-2310-81
126	Lampa Minolta 9351-2821-52
127	Lampa SD 801 BK, Black - LED
128	Low picker EP8605 (65242358)/65-242358
129	Low picker finger Minolta 5325 (35013690)/P.L.MIN5325
130	Low pressure roller Mita 1415 (38636842)/L.P.MIT1415
131	Low pressure roller Mita DC111 (38636396)/L.P.MITA111
132	Low.pres. EP Di151 (35022053)/L.P.MINDI1510
133	Low.pres.Canon 6030 (15008768)/L.P.CAN603000
134	Low.pres.Ricoh 4422 (70020957)/L.P.RIC442200
135	Low.pres.rol.Canon-PC/FC (15636886)/L.P.CAN6010
136	Low.pres.Toshi.1710 (43009126)/L.P.TOS171000
137	Low.pres.Toshi.2060 (43018879)/L.P.TOS206000
138	Low.pressure CF 900 (65021505)/65-021505
139	Low.pressure EP1030 (35017450)/L.P.MIN103000
140	Low.pressure EP2120 (35009347)/L.P.MIN212000
141	Low.pressure EP4233 (35636322)/L.P.MIN423300
142	Low.pressure EP5000 (35020955)/L.P.MIN500000
143	Lower fuser DC1001/1205
144	Lower Picker Finger Di650 BH 600/700/8048
145	OPC DRUM DI450/550
146	OPC Drum Kit IR 2230 (26626)
147	OPC Drum Kit IR 3300 (22942)
148	OPC Drum Kit NP 6612/22522

Nr. crt.	Articol
149	OPC Drum KN 7135 (22948)
150	Orig.feed.rol.EPAF7 (35011858)/ROL.MINAF7-00
151	Pap.feed.rol.EP 350 (35021951)/ROL.MINDI6200
152	Pap.feed.rol.EP8010 (35010188)/ROL.MIN801000
153	Pap.feed.rol.EP8605 (65-011546)/65-011546
154	Pap.feed.rol.EPAFR17(65022624)/65-022624
155	Pap.feed.rol.EPAFR17(65022790)/65-022790
156	Paper feed roller Canon 6030 (15011264)/P.F.CAN6032
157	Paper feed roller Canon 6030 (15012302)/P.F.CAN6030
158	Paper feed roller Canon 6030 (15016779)/P.F.CAN6031
159	Paper feed roller NP 6050 (15015611)/P.R.CAN6050
160	Paper Feed Tire KN 6192/65015378
161	Paper pickup EP1080 (65013777)/65-013777
162	Paper pickup EP2120 (35014019)/P.P.MIN212001
163	Paper pickup EP5325 (65009692)/65-009692
164	Paper pickup EP5400 (65-011312)/65-011312
165	Paper pickup RC4421 (70010824)/70-010824
166	Paper pickup roller KN Di450 (65022052)
167	Paper pickup roller NP 6030 (15017821)/P.P.RCAN6030
168	Paper Pickup Roller PU Minolta Di251/351/7068
169	Paper pickup tire NP 6060 (15000888)/P.P.RCAN6060
170	Paper pickup tire NP 6880/3225 (15012799)/P.P.TCAN6880
171	Paper pickup TS1550 (43017098)/P.P.TOS155000
172	Picker finger 1067-5710-01
173	Picker finger 28120470

Nr. crt.	Articol
174	Pickup.roll. pentru EP6000/Di 620 (13024)/13024
175	Separ.roller EP2050 (35000878)/ROL.MIN205001
176	Separ.roller EP4233 (65-018480)/65-018480
177	Separ.roller NP6850 (15636671)/ROL.CAN685000
178	Separat.tire CLC 800(15017777)/ROL.CLC800-00
179	Separation pad AFR7 (65021477)/65-021477
180	Separation pad AFR7 (65023916)/65-023916
181	Separation roller Canon (15015626)/P.R.CAN6803
182	Separation roller Minolta 4230 (35636636)/SEP.R.MIN4230
183	Separation roller NP 6050 (15013735)/S.R.CAN6050
184	Spacer Roller ,Rear EP1050/1080/07102
185	Spray transfer pt. Imprimat tricouri
186	Starter CF 9001 Yellow II/8937-154
187	Take up rol.EP 8605 (35012218)/ROL.MIN860500
188	Takeup rol.EP Di350 (65021894)/65-021894
189	Transfer Belt Unit pt. CF 1501/4697-161
190	Up fuser roller Canon 3025 (15636303)/U.F.CAN3025
191	Up fuser roller Canon 3825 (15013792)/U.F.CAN3825
192	Up fuser roller Canon 4835 (15013793)/U.F.CAN4835
193	Up fuser roller Ricoh 4422 (70013837)/U.F.RIC.4422
194	Up. picker finger Di 250 (7081)
195	Up.fuser Canon 5060 (15012725)/U.F.CAN506000
196	Up.fuser Canon 6010 (15016033)/U.F.CAN601000
197	Up.fuser EP CF900 (65-021504)/65-021504
198	Up.fuser NP CLC550 (15016195)/U.F.CANCLC550

Nr. crt.	Articol
199	Up.fuser NP CLC700 (15022701)/U.F.CANCLC700
200	Up.fuser Tos.e-STUD.(43023316)/U.F.TOSESTUD0
201	Up.fuser Toshi.1550 (43015780)/U.F.TOS155000
202	Up.fuser Toshi.2060 (43015656)/43-015656
203	Up.pick.finger NP 5060 (15000893)/U.P.CAN5060
204	Up.picker EP 3050 (65014547)/65-014547
205	Up.picker NP 4835 (15013099)/P.U.CAN483500
206	Up.picker NP 5060 (15016086)/P.U.CAN506000
207	Up.picker pentru EP 1050 (13141)/13141
208	Upper Fuser Roller/31411
209	Upper roller gear 1139-5532-01/07103
210	VideoCam iSlim 321R, Genius
211	Waste toner container EP 3050 (35017532)/W.T.MIN3050